




# Mini Projector

## QUICK GUIDE

### LOCATION OF PARTS AND CONTROLS

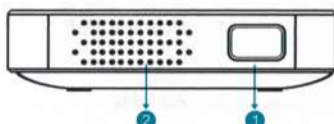


- 1: Lens
- 2: Speaker
- 3: Return
- 4: Confirm/Play/Pause
- 5: Right / FF / Volume+
- 6: Left / REW / Volume-
- 7: Volume Switch
- 8: Power indicator
- 9: Audio output
- 10: USB input/Power out
- 11: HDMI input
- 12: DC input (5V/2A)

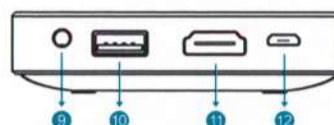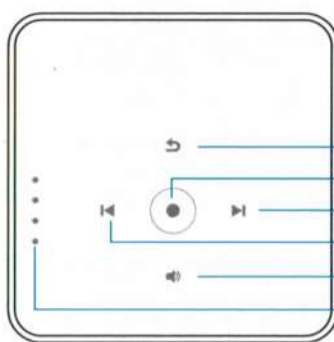

### SIGNAL SOURCE


The projector support HDMI input, USB drive and Micro SD card plug and play.

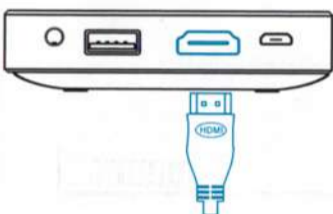

### HDMI input


The projector can be connected to a variety of HDMI compatible devices via a wired connection, such as laptop, smartphone, tablets, PSP, etc. Please note the HDMI signal takes precedence over the USB disk and Micro SD card inputs.

**NOTE:** Some devices may require an adapter to connect to your device. To determine what type of adapter you need to use, please reference the compatibility section of this manual. (For example, iPhone or iPad need a Lightning to HDMI AV adapter as below.)

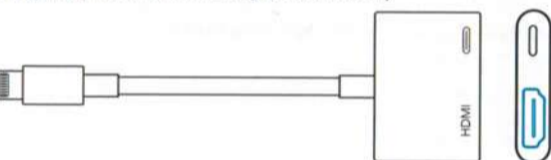


### CHARGING

Fully charge the battery before first use(approx. 4-5 hours)  
Connect the Adapter to the micro USB port of projector for charging.

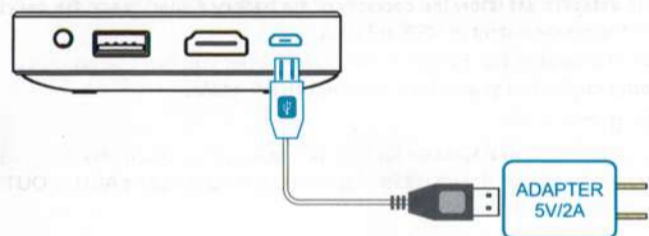

### PROJECTOR ON/OFF

Press the switch button 5 seconds both for turn on and turn off.

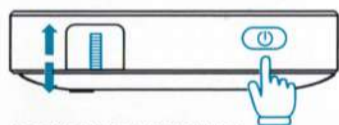


### FOCUS ADJUSTMENT

Simply roll the focus wheel control up and down to fine tune the projected image.



### VOLUME ADJUSTMENT

Touch the 'M' button, then the screen will display the volume bar. now you can adjust the volume by the button ◀ and ▶.

### LOCATION OF PARTS AND CONTROLS

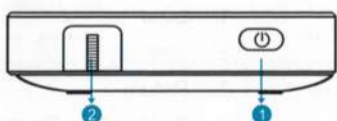



- 1: Power on/off
- 2: Focus wheel
- 3: Air inlet
- 4: Tripod dock
- 5: Label
- 6: Non-slip mat
- 7: Micro SD slot
- 8: Air outlet

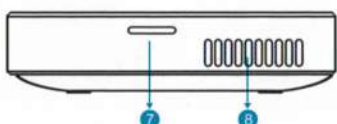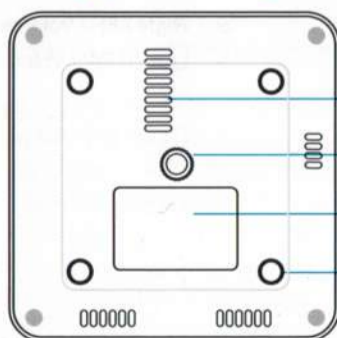

### USB DRIVE & MICRO SD CARD INPUT

Plug the USB drive or Micro SD card to the correct slot, then the projector can read the video or photo files directly by below steps.

Video Photo → USB drive Micro SD → File list → Select the correct file.

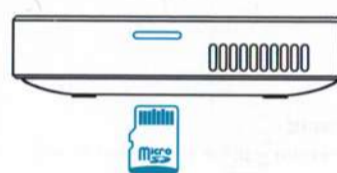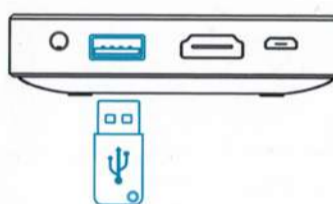

When the video is playing, the function of left and right button become to fast forward and fast backward, the speed is up to 16 times. and the function of the confirm button become play and pause.

When the photo is playing, the function of left and right button become to last and next, it will be playing as a slide show if no one operate it.


### POWER OUT

Connect the charging cable of your device to the projector's USB port, the projector turned into a power bank, it can charge your mobile phone directly. and the indicator will show the capacity of the battery if short press the switch button. the power output of USB is 5V/1A.

**Notice: if charging for iPhone when HDMI mode, you have to connect charging cable firstly, and then connect HDMI cable.**

### AUDIO OUT

The projector build in a speaker for normal use, but it can output the audio also. Plug the earphone or line-in cable of speaker to the projector's AUDIO OUT port as below image.

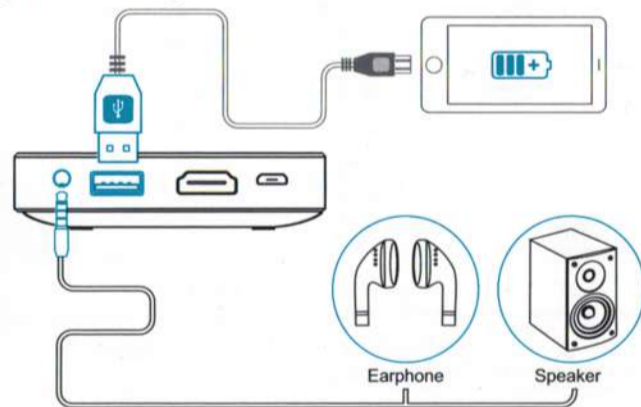

### WARNING!

THIS PRODUCT CONTAINS A RECHARGEABLE BATTERY.

- 1, Do not store this product in high temperatures, damp areas, or in direct sunlight.
- 2, Never disassemble the product.
- 3, Never dispose of the product in fire or water, which may result in explosion and/or injury.
- 4, Keep product out of reach of children.
- 5, Do not touch product with damp hands.
- 6, Dispose of the product properly.
- 7, The product must not be discarded with ordinary household waste.
- 8, Contact your local recycling center for proper disposal.

### DANGER!

TO REDUCE THE RISK OF ELECTRIC SHOCK, BURNS, FIRE OR INJURY:

- 1, Do not use while bathing or in a shower.
- 2, Do not place or store unit where it can fall or be pulled into a tub or sink.
- 3, Do not place in, drop or submerge in water or other liquid.
- 4, Do not reach for unit that has fallen into water. Unplug it immediately.
- 5, Care should be taken so that objects do not fall and liquids are not spilled onto the unit.